



+ = SERIES
& = PARALLEL

MAGNETIC
MODE SWITCH
PIEZO

TO SELECT MONO OR STEREO OUTPUT:
PRESS AND HOLD PIEZO VOLUME KNOB; SIGNAL WILL MUTE & RETURN; OUTPUT WILL ATERNATE BETWEEN MONO & STEREO
*NOTE: IF KNOB IS RELEASED PRIOR TO SIGNAL RETURNING, INSTRUMENT WILL EXIT "OUTPUT MODE" WITH NO CHANGES MADE

UPON PLUGGING CABLE INTO JACK OR UPON COMPLETION OF "OUTPUT MODE," THE AUDIO SIGNAL AND BATTERY BOX LED WILL PULSE ONCE (SIGNIFYING MONO OUTPUT ACTIVATION) OR TWICE (SIGNIFYING STEREO OUTPUT ACTIVATION)

MONO OUTPUT:
-MONO INSTRUMENT CABLE RECOMMENDED (TIP/SLEEVE)
-A MIXED COMBINATION OF THE ACTIVE MAGNETIC AND ACTIVE PIEZO SIGNALS IS PRODUCED
-THE MAG/PIEZO MIX TRIM POT CONTROLS THE MAXIMUM LEVEL OF THE PIEZO SIGNAL

STEREO OUTPUT:
-STEREO INSTRUMENT CABLE RECOMMENDED (TIP/RING/SLEEVE)
-TIP OUTPUTS ACTIVE MAGNETIC SIGNAL; RING OUTPUTS ACTIVE PIEZO SIGNAL
-THE MAG/PIEZO MIX TRIM POT IS DISABLED

ERNEBALL® MUSICMAN®

JP MAJESTY CONTROL FUNCTION DIAGRAM

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		MATERIAL	DRAWN	SCALE	DATE
		-	DTM	-	05-06-14
DECIMALS	ANGLES	FINISH	APPROVED	PART NUMBER	REV
.XX ±.01	± 1°	-	OSL	-	-
.XXX ±.005					